

INSTRUCTION MANUAL

BLUETOOTH DONGLE SK-600135

SKYRC

Thank you for purchasing SkyRC Bluetooth Dongle (SK-600135). Bluetooth Dongle lets you establish a connection between the SkyRC gadget and your smartphone to control and monitor the device via the app.

Remark: We use the charger as an example in this manual!

FEATURES

- Bluetooth 5.0, High Speed and Long Range.
- Connect and ready instantly.
- Customized for devices by SkyRC.

SPECIFICATION

- Input Voltage: 4.5V-5.5V
- Input Current: $\leq 20\text{mA}$
- Range: 15M
- Interface: Micro USB
- Bluetooth Status:
 - LED flashes blue: ready for connection
 - LED remains solid blue: connected
- Working Power: 110mW Max.
- Bluetooth Version: 5.0
- Working Temp: -10 to 55°C / 14 to 131°F
- Storage Temp: -20 to 70°C / -4 to 158°F
- Dimension: 45x25x13mm
- Weight: 9g

APPLICATION (We take charger for example!)

1. Download the SkyCharger App from App Store or Google Play to install;
2. Connect the dongle to the charger as illustrated below;
3. Turn on the charger, the LED on the Bluetooth dongle will blink blue;
4. Enable Bluetooth on your smartphone;
5. Open the SkyCharger to search for Bluetooth;
6. When the device named [B-Dongle-XXXX] appears, tap to connect;
7. When the connecting process finishes, the LED on the Bluetooth dongle will stay steady blue;
8. Control and monitor the charger as you like.

*For other Apps' instruction, please check the corresponding device's manual.



Useful notes and tips:

1. You can only control your device with one phone at a time;
2. When you try to connect the device, make sure the LED on the dongle is blinking blue.

WARRANTY AND SERVICE

We guarantee this product to be free of manufacturing and assembly defects for a period of one year from the time of purchase. The warranty only applies to material or operational defects, which are present at the time of purchase. During that period, we will repair or replace free of service charge for products deemed defective due to those causes.

This warranty is not valid for any damage or subsequent damage arising as a result of misuse, modification or as a result of failure to observe the procedures outlined in this manual.

Note:

1. The warranty service is valid in China only.
2. If you need warranty service overseas, please contact your dealer in the first instance, who is responsible for processing guarantee claims overseas. Due to high shipping cost, complicated custom clearance procedures to send back to China. Please understand SkyRC can't provide warranty service to overseas end user directly.
3. If you have any questions which are not mentioned in the manual, please feel free to send email to info@skyr.com