

## Futaba

## 5-U301 universal servo

## <u> 5.BUS</u> **2**

		at 6.6 V	at 7.4 V			
SPEED	(s/60°)	0.18	0.16	WEIGHT	1.59x0.79x1.42 3. 3	
TORQUE	(kgf · cm)	3.5	3.9	RATED VOL	TAGE	36 [ g ] 6.0~7.4 [ V ]
	(ozf · in)	48.6	54.2	OPERATING V	OLTAGE	4.0~8.4 [ V ]

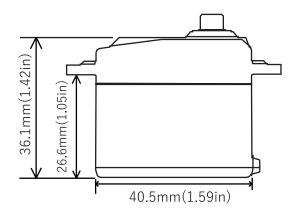

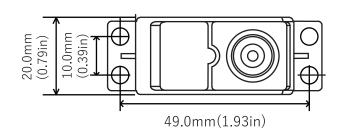

## **WARNING**

▲Turn on the power in transmitter → receiver order. In addition, always check the operation of all the servos before use.

⚠ Do not leave the servo in the locked state.Leaving the servo in the locked state may cause smoke, fire, and damage.

⚠ Never connect the battery in reverse.Reverse connection may cause smoke, fire, and damage.

⚠ Do not touch the servo case immediately afterservo operation. You may be burned because the motor and circuits inside the servo become hot.

⚠ Use the servo as an actuator in hobby applications. Futaba will not be responsible if the servo is used in applications other than the above.

⚠ Futaba will not be responsible for damage,etc. caused by the use of parts other than Genuine Futaba parts.