


TRX-4MT™ Cutting Template for adding engine detail

- Cut out the hood template along the lines as indicated below.
- Secure the template to the body with adhesive tape, aligning the arrows on the template with the body lines on the hood as shown.
- Mark the hole locations indicated on the template (either for the Ford® F-150® body **OR** the Bigfoot® body).
- Use a tapered reamer to cut the far right hole at 2.5mm and the middle hole at 2.1mm for the Ford F-150 body.
- Use a tapered reamer to cut the second hole from the right and the left two holes at 2.1mm for the Bigfoot body.

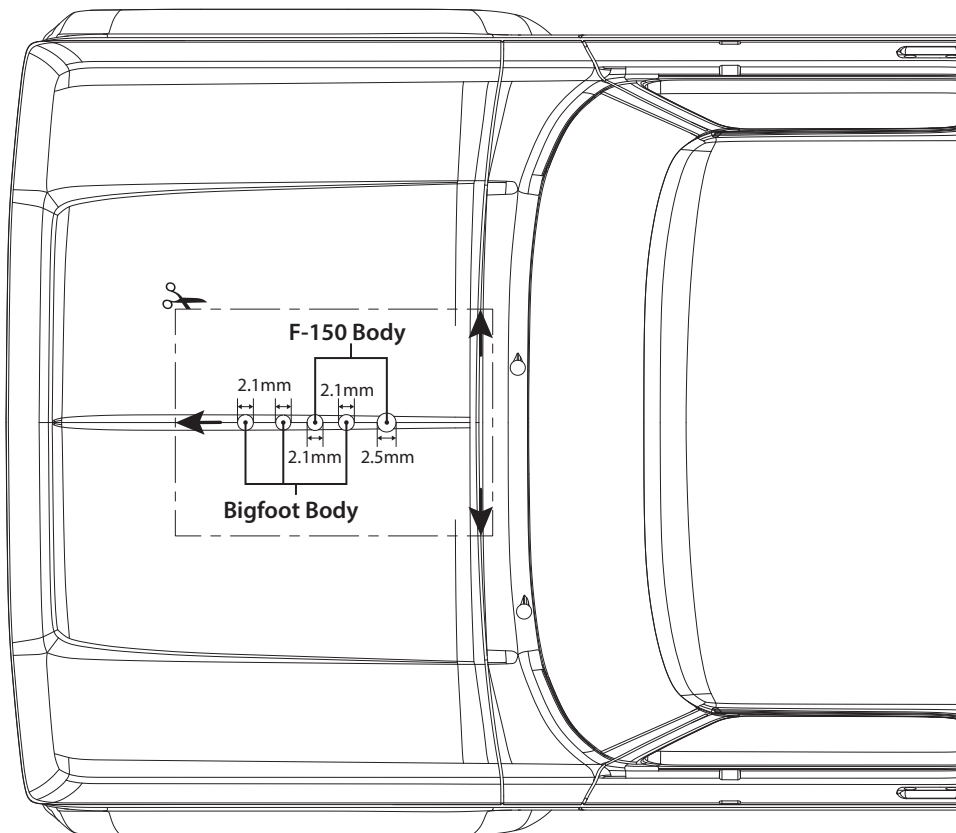

Ensure printer settings are at 100%.



CAUTION: RISK OF INJURY!

Use care with hobby knives, tapered reamers, and other cutting tools as they are extremely sharp and can cause severe injury, deep cuts, and/or punctures.